

## *Quick User Guide*

# DB9000-STC

DSP-Based Stereo Generator  
with RDS/RBDS Encoder

### → BEFORE YOU USE THIS PRODUCT ←

In order to be able to enjoy all the benefits of owning your new DEVA product, please verify first that the latest software and firmware release were installed.

Visit [www.devabroadcast.com/downloads](http://www.devabroadcast.com/downloads) for the most recent software and firmware downloads, prior the installation.

This Quick user guide will make the installation of DB9000-STC quick and easy. Applying these principles, you can simplify the process and save yourself extra time and effort. **For more information about the Safety precautions and the Operating environment recommendations please refer to the User Manual.**

**STEP 1** **Connection**

1. Install the unit on its operation place away from abnormally high RF Fields;
2. Before connecting the device to the power supply, make sure that the internal selector is in accordance with the mains supply at your location. DB9000-STC Power Supply Factory Settings are 115-230V, 50-60Hz AC mains ;
3. The encoder has to be connected to the local network or Internet by cable with RJ-45 connector.

As only one input at a time can be managed by the encoder, please select the preferred signal source input - either analog or digital one:

- For **Analog audio** use a cable that ends with two standard XLR jacks to connect the analog signal source to the analog audio inputs of DB9000-STC;
- For **Digital audio** use a cable that ends with standard XLR jacks to connect the AES/EBU signal source to the digital audio input of DB9000-STC.


**NOTE:** For the RS-232 COM PORT use a standard DB-9 cable to connect DB9000-STC to any RS-232 compatible equipment.

**STEP 2** **Configuration**

**DB9000-STC** is controlled trough a build in WEB Server and a standard web browser can be used to monitor its status or to make some adjustments.

To operate the device you need to know its IP Address. In case you are not aware of it, you can hear it through the headphones when you turn on the the device. Alternatively, use the Network discovery feature at Local networks (*for reference see Step 13*).


**STEP 3** **WEB Interface**

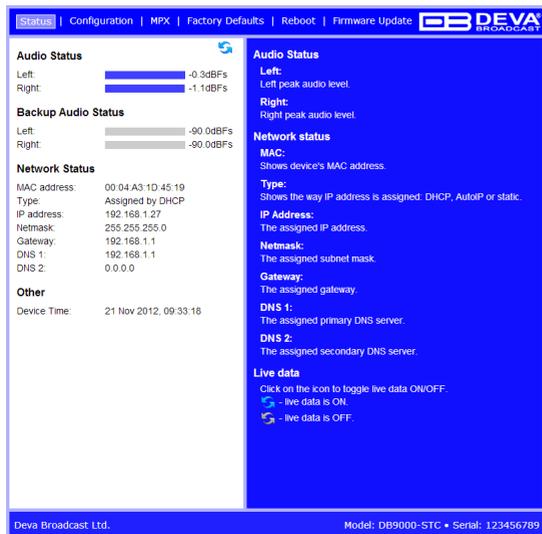

Open a WEB Browser and enter the device IP Address in the browser's address field, then press Enter. The web interface will be displayed Current status information will be displayed comprising: Audio Status; Network Status; Active connections Status.

For further reference see the detailed explanation on the right part of the screen.

A username and password may be requested if the Access Control is turned on and a page other than STATUS is selected. Default values are *user* and *pass*.

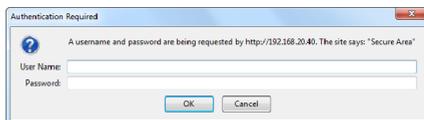

## STEP 4

## General Settings

Click on the Configuration button. A dialog will appear. Fill in the username and password requested, default values being: user and pass.

### Device Alias

By choice, you can change the name of the device. Later on it will be used as a title name on all WEB pages. Customizing the name will make the device more recognizable.

### Date and Time

- **Internet Time**  
Enable or disable automatic time synchronization from Internet;
- **Time Zone**  
Select local time zone of the device;
- **Local Date and Local Time**  
Enter the local date and time if the Internet Time is disabled.

**NOTE:** After selecting new settings, press the SAVE button to put them into effect. Some of the new settings can reset DB9000-STC.

Status | **Configuration** | MPX | Factory Def  
General | Network | Backup Audio | COM Port  
**Device Alias**  
Alias: DB9000-STC  
**Date and Time**  
Internet Time:  Enabled  Disabled  
Time Zone: GMT  
Local Date:   
Local Time:   
URL: pool.mtp.org  
Port: 123  
Save

## STEP 5

## Network Configuration

### General Network Settings

If you prefer to use static settings please disable the DHCP and fill in the information requested - IP Address, Netmask, Gateway, Primary and Secondary DNS. Otherwise, enable the DHCP.

### IP Voice Announcement

In order to avoid IP voice announcement during broadcasting we recommend you to disable this function.

### Web Server Settings

In order to enhance the security of DB9000-STC you can set new username and password. A dialog box requesting your NEW username and password may appear.

**NOTE:** If username and password fields are left blank, **NO** security is used.

### FTP Server Settings

Specify the Command Port of the FTP server. Enter username and password for the FTP server.

The FTP Server must be in Passive mode-maximum one connection at a time.

### SNMP Settings

Press the **Download button** to download the latest available DB9000-STC SNMP MIB file. Then **specify** Agent ID, Agent Port, Community, Manager IP and Manager Port.

**Agent ID** is used to identify the device among others when a SNMP notification is send. Agent - enables/disables SNMP Agent.

Status | **Configuration** | MPX | Factory Def  
General | **Network** | Backup Audio | COM Port  
**General**  
DHCP:  Enabled  Disabled  
IP Address: 0.0.0.0  
Netmask: 0.0.0.0  
Gateway: 0.0.0.0  
Primary DNS: 0.0.0.0  
Secondary DNS: 0.0.0.0  
**IP Voice Announcement**  
IP Address:  Enabled  Disabled  
**WEB server**  
Port: 2701  
Username: user  
Password: pass  
**FTP server**  
Command Port: 21  
Data Port: 2020  
Username: user  
Password: pass  
**SNMP**  
SNMP MIB File: Download  
Agent:  Enabled  Disabled  
Agent Port: 161  
Manager Port: 162  
Agent ID: 0  
Community: DEVA9000  
Manager IP: 0.0.0.0  
Save  
Deva Broadcast Ltd.

## STEP 6

## Backup Audio Configuration

### Audio Loss and Audio Recover

Select the appropriate levels of loss and recovery of the audio signal. Do not forget to set the timeout. Set whether the loss of audio should be registered by the one channel only or for both of them.

DB9000-STC has a **built-in backup audio player**. It plays tracks from SD Card storage uploaded over the FTP in case of main audio signal loss.


The **MPS Audio Player** permits you to Select the order in which the tracks are played by the backup player from the possible options.

All backup audio files must be located in a single folder named **Audio**. It must be in the root of the **SD Card**. No subfolders are allowed. The playlist file must be named playlist.m3u.

Status | **Configuration** | MPX | Factory Def  
General | Network | **Backup Audio** | COM Port  
**Audio Loss**  
Channel Loss:  Single  Both  
Threshold: -50 dB  
Time: 10 s  
**Audio Recover**  
Threshold: -50 dB  
Time: 10 s  
**MP3 Audio Player**  
Playback Order: Shuffle

## STEP 7

## COM Port Configuration

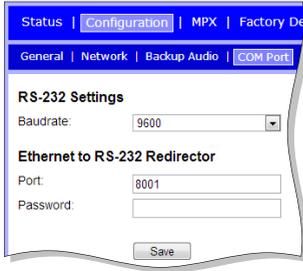

DB9000-STC acts as Ethernet to an RS-232 redirector. You can connect any RS-232 compatible equipment to DB9000-STC and to communicate with it over the Internet. A special software (Virtual COM Port to Ethernet Tool) need to be installed on your PC in order for the COM Port configuration to take place. Enter a Baudrate and configure the external equipment to the same baud rate, specify Port and Password next.

The password is the first symbols your software must send to authenticate itself to the Redirector. If left blank, NO security is used. Default value is pass.

## STEP 8

## Stereo Encoder



- **Stereo Mode** - Select Stereo or Mono Mode for MPX signal.
- **Emphasis** - Select 50µS for Europe or 75µS for USA.
- **Audio Input** - Choose the preferred audio signal source and set the A/D amplifier gain.
- **Injection Levels** - Select injection level from 0 to 12 % for the 19kHz pilot tone and for the RDS subcarrier.
- **Phase Adjustment** - Select a phase of the Pilot Tone, those of the L-R sub-carrier and RDS sub-carrier are factory adjusted.
- **MPX Limiter** - Enable or Disable the MPX Limiter and set the desired Threshold and Processing.

**NOTE:** For further reference see the detailed explanation on the right part of the screen.

## STEP 9

## Audio Enhancement

### Automatic Gain Control Settings

Enable or Disable the Automatic Gain Control (AGC).

There are factory and user configurable presets available. Set your own AGC presets changing the following parameters: Attack time, Release time, Gain, Max gain up.

### Audio Equalizer Settings

Applied equalizer gain has to be set according to the level of specified frequency and overall level of this frequency must not exceed 0dB.



## STEP 10

## Stereo Encoder

**RDS Encoder**  
 Enable:  Enabled  Disabled

**Program Station Name**  
 PS Static: DB9000  
 PS Dynamic: DB9000-STC Stereo Coder & RDS Encoder

**Radio Text**  
 Radio Text: DB9000-STC Stereo Coder & RDS Encoder  
 RT speed: 4

**General**  
 PI: 1234  
 PTY: 0  
 PIN: 0  
 MS:  Music  Speech

**Traffic Information**  
 TP:  On  Off  
 TA:  On  Off

**Decoder Information**  
 Stereo  Mono  
 Artificial Head  Not Artificial Head  
 Compressed  Not Compressed  
 Dynamic PTY  Static PTY

**Date & Time**  
 Enable:  Enabled  Disabled

**Program Type Name**  
 Enable:  Enabled  Disabled  
 PTYN:

**Console**  
 Port: 8000  
 Password: pass

Deva Broadcast Ltd.

DB9000-STC has a built-in RDS Encoder, it allows you to brand your station.

### Program Station (PS) Name Settings

Comprise of PS Static, PS Dynamic, DPS Scroll Step, DPS Scroll Speed.

### Radio Text Settings

After pressing the INFO button on the receiver, up to 64-character block for visual display will appear on the faceplate of the radio.

**RT Speed** – Select RT transmission speed from RT off to Fast.

### General Settings

Comprise of PI – Program Identification: “digital signature” of the station, PTY – Program Type, M/S – Music / Speech Switch.

### Traffic Information

TP – Traffic Program Identification. Turn TP on or Off.

TA – Traffic Announcement: Turn TA on or Off.

### Decoder Information

DI – Decoder Information: This is one of several ‘flags’ that convey yes/no or other very basic data.

### Console Settings

Enter the TCP port of the RDS console used to edit RDS settings in real time. Enter a Password for the RDS console: the first symbols that must be sent to authenticate to the RDS console, otherwise the connection will drop. If left blank, NO security is used.

## STEP 11

## Alternative Frequencies

DB9000-STC allows you to set your own alternative frequencies.

- **Disabled** - disable corresponding Alternative frequencies;
- **LF/MF Follows** - This tool indicates that next Alternative frequency is in the *Low* or *Medium* frequency range;
- **Filler** is used to fill the *Alternative frequency* list to even length.
- **1 to 204** - Alternative frequency. For more information see "AF reference table" placed on the right part of the WEB Interface.

**Alternative frequencies**

|        |          |
|--------|----------|
| AF 1:  | Disabled |
| AF 2:  | Disabled |
| AF 3:  | Disabled |
| AF 4:  | Disabled |
| AF 5:  | Disabled |
| AF 6:  | Disabled |
| AF 7:  | Disabled |
| AF 8:  | Disabled |
| AF 9:  | Disabled |
| AF 10: | Disabled |
| AF 11: | Disabled |
| AF 12: | Disabled |
| AF 13: | Disabled |
| AF 14: | Disabled |
| AF 15: | Disabled |
| AF 16: | Disabled |
| AF 17: | Disabled |
| AF 18: | Disabled |
| AF 19: | Disabled |
| AF 20: | Disabled |
| AF 21: | Disabled |
| AF 22: | Disabled |
| AF 23: | Disabled |
| AF 24: | Disabled |
| AF 25: | Disabled |

**Alternative frequencies**

**AF x:**  
 List of alternative frequencies. Select each one according to your needs.  
 • Disabled - disable corresponding AF  
 • LF/MF Follows - not an AF. Indicates that next AF is in the LF/MF frequency range.  
 • Filler - not an AF. Used to fill AF list to even length.  
 • 1 to 204 - AF frequency. For more information see "AF reference table".

*Note: First "Disabled" AF ends the list.  
 Note: If AF 1 is "Disabled" list is NOT transmitted.*

**AF reference table**

|     | FM        | LF/MF    |
|-----|-----------|----------|
| 1   | 87.6 MHz  | 153 kHz  |
| ... | ...       | ...      |
| 15  | 89.0 MHz  | 279 kHz  |
| 16  | 89.1 MHz  | 531 kHz  |
| ... | ...       | ...      |
| 135 | 101.0 MHz | 1602 kHz |
| 136 | 101.1 MHz | ...      |
| ... | ...       | ...      |
| 204 | 107.9 MHz | ...      |

Deva Broadcast Ltd. Modell: DB9000-STC • Serial: 123456789

## The Factory Defaults page



To restore DB9000-STC to its Factory Defaults you should first press the Restore button. A new window will appear: confirm that you want to restore factory defaults and wait for the process to complete. All settings will be restored to their factory defaults

except for Network and WEB server Settings which remain unchanged. On completion of the process the settings should have the proper default values.

## Hardware Reset


This process will fully restore DB9000-STC to its Factory Defaults, including the Network settings. To start a Hardware Reset, disconnect the power supply cable from the unit. Then locate the RESET button on Rear panel, press and hold it. Afterwards, connect the power supply cable to the unit and keep the RESET button hold until the POWER led starts blinking. Release the RESET button and wait for DB9000-STC to reboot with the factory default settings.

## Rebooting



To start Rebooting of DB9000-STC press the Reboot button. A dialog warning window will appear. Confirm that you want to reboot the device and wait for the process to complete.

## Firmware Update

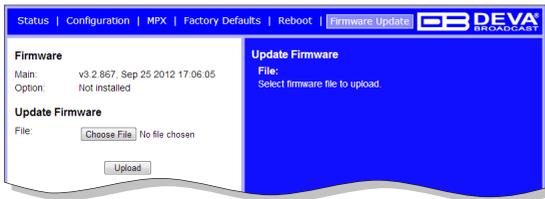

To update the device firmware, please select the new firmware file. Press the Upload button. A dialog window will appear. Confirm firmware update and wait for the process to complete.

1. Open Advanced sharing settings by clicking the **Start** button, and then on "**Control Panel**". In the search box, type "**network**", click "**Network and Sharing Center**", and then, in the left panel click "**Change advanced sharing settings**".
2. Select your current network profile.
3. Click **Turn on network discovery**, and then click Save changes. If you're prompted for an administrator password or confirmation, type the password or provide confirmation.
4. To access the device open a new Explorer bar and click on **Network**. If you have successfully enabled the network discovery option, the device will be displayed. A double click on **DB9000-STC** will open a new WEB browser window.

**NOTE:** If you have already enabled this function on your computer just open a new Explorer bar and click on **Network**. The device must be displayed. If not, follow the instructions from Step 13.

**Enjoy the work with DB9000-STC - a product of superb quality and functionality.  
For detailed explanations concerning the device refer to its complete manual.**